

DIMM Installation Guide

Hewlett-Packard 2300 Printers:

IMPORTANT: Ensure the printer power is switched OFF, and then disconnect the printer power cord from the AC wall outlet.

1. Depress the two buttons located at the rear of the printer, and pull the cover open (Figures 1 and 2).
2. Unhinge the cover, and remove the cover from the printer (Figure 3).



Figure 1

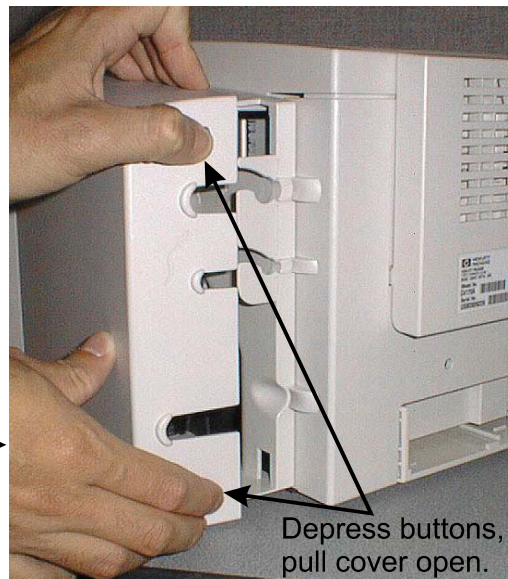


Figure 2



Figure 3

NOTE: If assistance is required for removing or installing the DIMM, please call Altec Technical Support at (800) 997-9921 x 1248.

DIMM Installation Guide

3. Open the toner compartment door, depress the interlock button on top of the printer (Figure 4), and then slide the printer panel forward about 1/2 of an inch. The panel should easily pull away and detach from the printer (Figure 5).

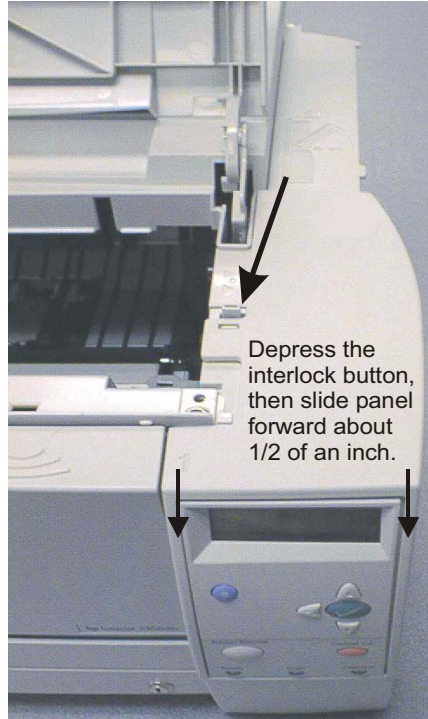


Figure 4

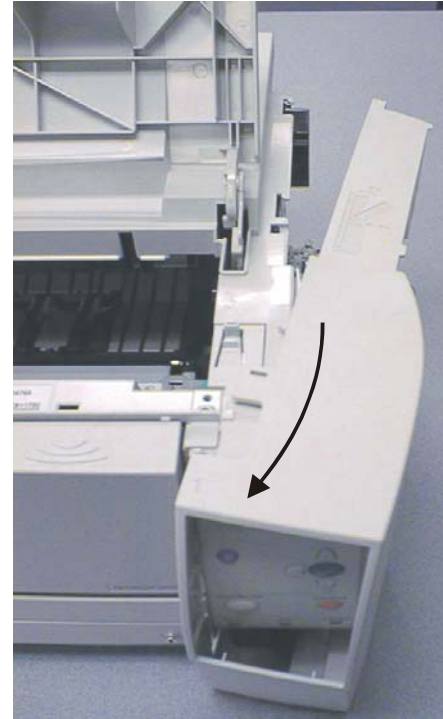


Figure 5

CAUTION: The DIMM is a static-sensitive device and can be permanently damaged if handled improperly. Avoid touching any components or the metal contacts along the edge of the DIMM. Before removing the DIMM from the anti-static bag, ground yourself by touching the metal portion of the printer chassis to dissipate any static charge.

4. Verify the DIMM slot retaining clips are pushed out to the side to allow installation of the Font DIMM. Ensure the Font DIMM is positioned correctly (Figures 6 and 7), and then fully insert the DIMM into one of the available DIMM slots until it snaps into place (the retaining clips should close automatically).

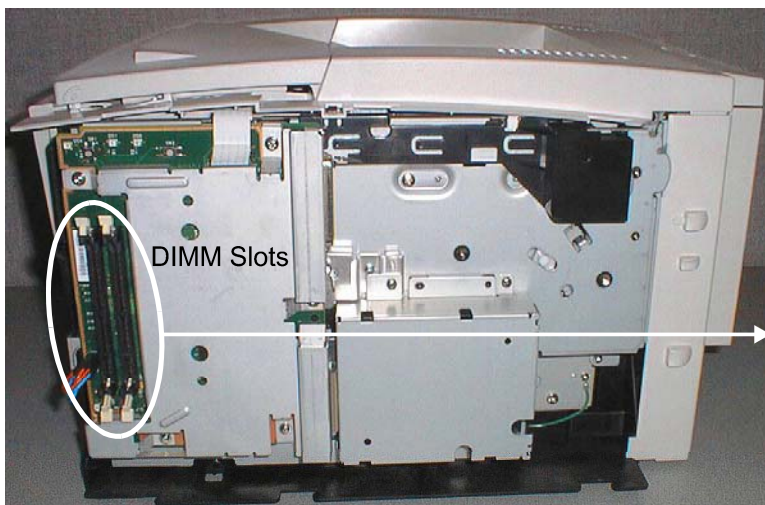


Figure 6

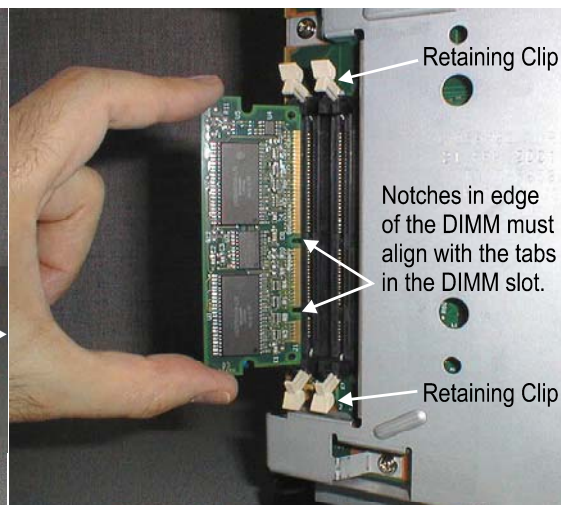


Figure 7

5. Replace the printer panels, and then reconnect the printer power cord and printer data cable.
6. Refer to the HP Quick-Start Guide (provided with your HP DIMM Solution) for instructions on installing the required HP software and support files.