

DIMM Installation Guide

Hewlett-Packard 4100 Series Printers:

IMPORTANT: Ensure the printer power is switched OFF, and then disconnect the printer power cord from the AC wall outlet.

1. Unsnap and slide the right-rear panel toward the rear of the printer (Figure 1).
2. Open the DIMM access door (Figure 2). For easier access, the metal door can easily be removed by lifting the door off the hinge slots.

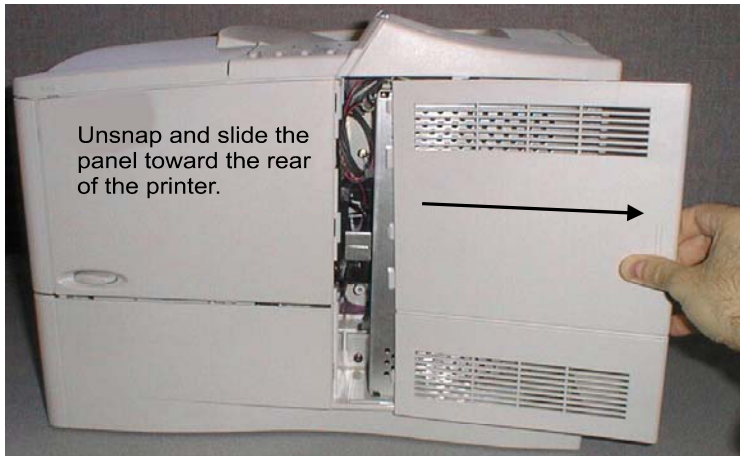


Figure 1



Figure 2

CAUTION: The DIMM is a static-sensitive device and can be permanently damaged if handled improperly. Avoid touching any components or the metal contacts along the edge of the DIMM. Before removing the DIMM from the anti-static bag, ground yourself by touching the metal portion of the printer chassis to dissipate any static charge.

3. Verify the DIMM slot retaining clips are pushed out to the side to allow installation of the DIMM. Ensure the DIMM is positioned correctly (Figures 3 and 4), and then fully insert it into either DIMM slot #2 or #3 until it snaps into place (the retaining clips will close automatically). **Do not remove or change the position of any DIMMs installed in DIMM slots #0 or #1.**

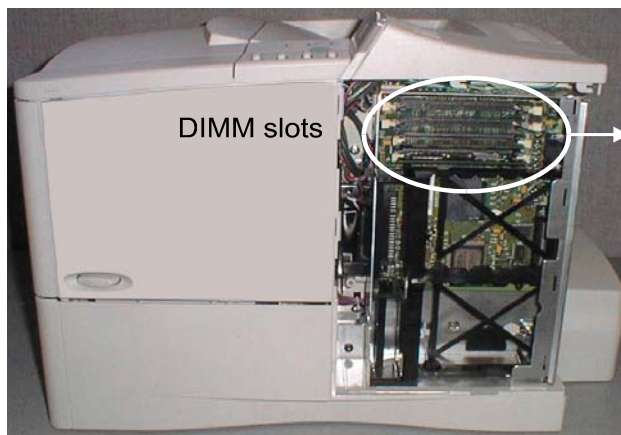
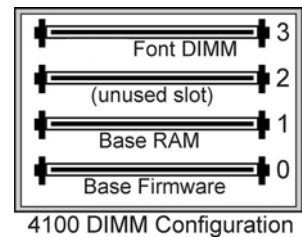


Figure 4

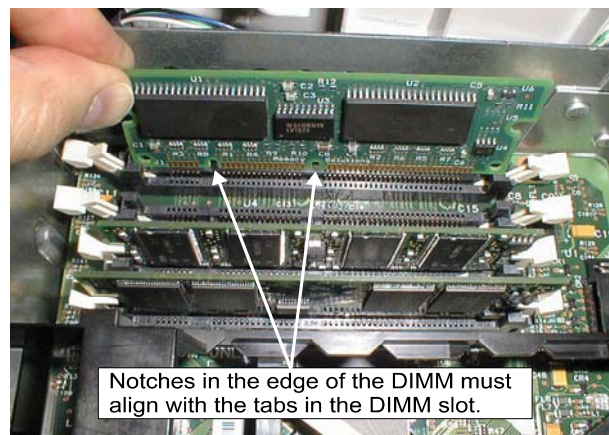


Figure 5

4. Close the DIMM access door, replace printer panels, and reconnect the power cord and printer data cable.
5. Refer to the HP Quick-Start Guide for instructions on installing the required software and support files.